



Kids Cellular Smartwatch

User Manual

Contents

1.Product Introduction.....	1
Product Description.....	1
Package Contents.....	1
Product Overview	2
Basic Operation Instructions.....	3
Technical Specifications.....	3
2.Getting Started.....	4
Download the Application.....	4
Registration Instructions.....	4
Pair the Watch with the Administrator Profile in the App.....	5
Querying and Refilling the Data Plan.....	7
3.App Functions.....	8
4.Safety Information.....	11

Storage and Transportation.....	11
Warnings.....	12
Manufacturing Date.....	16
5.Frequently Asked Questions.....	17
6.Care and Maintenance Tips.....	20
7.Warranty and Support.....	20
8.Declaration of Conformity.....	21

1. Product Introduction

Product Description

This Kids Watch is a 4G watch-phone designed for children. It features GPS/A-GPS, Wi-Fi, and LBS tracking, video chat, and an SOS button. The watch is intended for tracking a child's location as well as enabling calls and messages for easy communication.

Package Contents:



Kids Watch



Magnetic charging cable



User manual




Silicone case



Nano Sim (installed)

Product Overview

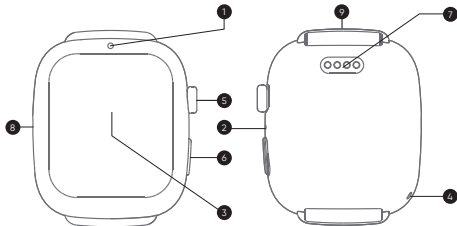

- ① Camera ② Vent hole ③ Sensor display ④ Microphone
- ⑤ On/Off button ⑥ Back/SOS button ⑦ Magnetic charging port
- ⑧ SIM card tray ⑨ Speaker

Note:

Button ⑥: Press and hold for 3 seconds to activate the SOS function (ensure the watch is powered on); short press to return to the previous menu.

Basic Operation Instructions

Turn on the device: Press and hold the button ⑤ for 3 seconds

Activate SOS signal: Press and hold the button ⑥ for 3 seconds when the watch is switched on

Go to the previous menu (Back): Press the button ⑥ shortly

Turn off the screen: Press the button ⑤ shortly when you're on the home screen

Turn off the device: Press and hold the button ⑤ for 3 seconds

Switch watch face: Press and hold the home screen for 3 seconds to select your watch face

Technical Specifications

Model.....MX3	Geolocation.....Wi-Fi/GPS/LBS
SIM card type.....NanoSIM	Net weight.....53 g
Display.....AMOLED 1.78"(368*448)	
Battery.....720mAh	3

2. Getting Started

Download the Application

Download and install the MAGI app from Google Play or the App Store, or scan the QR code to get the link.



Registration Instructions

- 1) Open the app and tap "Register"
- 2) Carefully read Terms and Privacy.
- 3) Enter your nickname and your email address.

- 4) Enter the registration code that was sent to your email (If you don't see it in your inbox, check your spam or junk folder.).
- 5) Enter your mobile phone number. Make sure to enter your phone number correctly, including the country code:
 - In the Country Code field, enter your country code. For example: 1 for the United States.
 - In the Phone Number field, enter your phone number. Do not include symbols such as '(', ')', '-', '_', ':', '<', '>'.
- 6) Create password and confirm it.

Pair the Watch with the Administrator Profile in the App

1. Turn on the watch and tap "Start Using" to enter the home screen. Swipe right to open the binding setup page, then tap "Next", A QR code for pairing will appear on the watch screen.
2. Open the app and tap the "+" icon (upper-left), or the notification icon (upper-right).

3. The app will open the add device screen, which directly activates the camera for scanning.
4. Use your phone to scan the QR code displayed on the watch screen.
5. Complete your child's profile information as prompted. (The watch comes with a pre-installed data-only SIM card, so the "Phone number" field in the app settings can be left blank.)

Note:

- * Ensure the SIM card installed in the watch has a data plan that supports mobile internet and that there is sufficient balance to connect.
- * The first account that pairs with the watch will become the Administrator account. The Administrator has full access to all watch functions, while other accounts have limited access.
- * To find the pairing QR code, swipe right on the watch's home screen. After pairing, the code can be

watch's home screen. After pairing, the code can be found under "Device Code" in the Administrator account within the MAGI app, or by navigating on the watch to: Main Menu >Setting >Binding Code.

If you have problems with any of the steps above, please use one of the following tips: see the FAQ recommendations below or on our website, email us at support@magimagi.tech or contact our support chat via app.

Querying and Refilling the Data Plan

- * Tap the "REFILL" button to go to the refill screen and purchase a data plan.
- * To keep the device online, we recommend purchasing a data plan with more than one year of validity or enabling automatic renewal.

3.App Functions

Mood

Allows children to record or share their current emotions using fun icons and short messages. Parents can view their child's selected mood through the MAGI app to better understand their emotional state.

Album

Stores all photos taken with the watch, allowing children to easily browse their favorite moments directly on the device. Parents can view images through the MAGI app.

Task

Helps build good habits by displaying daily tasks assigned by parents through the app. Children can check their tasks on the watch and mark them as completed, promoting responsibility and time management.

Target Step

Enables parents to set a daily step goal for their child through the MAGI app.

Care Time

Defines the active tracking period for the watch. By default, Care Time is set from 7:00 AM to 10:00 PM with location updates every 60 minutes. Parents can customize the time range and tracking interval through the MAGI app.

Note: Shorter tracking intervals provide more frequent updates but may consume more battery.

Class Mode

When Class Mode is enabled and class times are set, the watch restricts all functions except SOS calls. This ensures that children are not disturbed during school hours.

Historical Location

Tap “Historical Location” and select a date to view where your child has been throughout the day or during specific hours.

Alarm

Allows parents or children to set multiple alarms through the MAGI app or directly on the watch. Alarms can be used as reminders for waking up, doing homework, taking medication, or other daily activities.

Safe Zones

Allows parents to set up designated safe areas for their child. You will receive an alert whenever the child enters or leaves these zones. The center point and radius of each zone can be customized, and multiple safe zones can be added as needed through the MAGI app.

Family

Parents can view the contact information of all "followers" and "contacts." By tapping the "+" button in the top-right corner, you can add new contacts as followers or contacts. The permission hierarchy is as follows: Administrator > Follower > Contact.

Watch Friends

View all added smartwatch friends

4.Safety Information

Storage and Transportation

The device should be stored in dry, ventilated storage spaces with the temperature ranging from -10°C to +40°C and humidity from 15 to 85 % (without condensation). Whilst storing and transporting, the handling markings printed on the box should be followed. Please avoid any movement and potential impacts of packages during transportation.

Warnings

1. This product is not a toy. Do not allow children under 3 years old or pets to play with your watch. The product contains small components that can be a choking hazard.
2. Our watch is splash-resistant. It can withstand raindrops and sweat, however, it should be removed before swimming or showering. Swimming or showering with the watch on is strictly prohibited. Splash, water, and dust resistance are not permanently guaranteed and may decrease as a result of normal wear and tear. Do not attempt to charge the device when it is wet. Damages caused by liquid are not covered by warranty. The device is not intended to be used under water or to be continuously submerged in water.
3. Certain atmosphere factors and other sources of interference can affect the accuracy of GPS.

4. Do not store the device under extreme temperatures.
 5. Do not use or store the device in dusty or dirty environments.
 6. Do not drop, knock, or shake the device. Rough handling can disrupt internal circuit board and mechanical parts.
 7. Charging Requirements, Use a standard USB charger with an output of 5 V, 1 A (recommended) or 5 V, 2 A.
- Note:** The battery has a limited number of recharge cycles and may eventually need replacement. Battery life and recharge cycles vary based on usage and settings.
8. The full memory capacity is not available to the user. Available storage may vary depending on the software version and device settings.
 9. To prevent overheating, the video call function is limited to 3 minutes. The interval between video calls should be no less than 5minutes. In case of an emergency, a video call can be initiated from the MAGI

app by entering a confirmation code.

10. Our watch works in 2G/3G/4G network. Photo sharing, video chat function and automatic firmware updates may consume significant mobile data. Choose operator's tariff accordingly and add Wi-Fi passwords for frequently visited locations to reduce mobile data usage.

11. Regularly check for available updates in the watch's settings.

12. Our watch supports remote environmental monitoring through a hidden call to the device, if such functionality is not prohibited by the legislation of the country in which it is sold.

13. Ensure that the SIM slot is fully and firmly inserted. Otherwise, water may enter the device.

In order to avoid damage and ensure the continuous functioning of the device, we recommend the following:

-In case of submersion, remove the device from the water immediately, switch it off, and clean it with a dry cloth.

-Do not submerge the device again; avoid further submersion.

-Do not submerge the device into saltwater.

Size and weight depend on the configuration and manufacturing process.

The manufacturer reserves the right to change the construction, included accessories, and contents of the box, or the manufacturing technique without notice in order to improve any properties of the device, provided that this does not void any quality standards or laws in the country of manufacturing, transit, or sale.

Made in China

For terminal equipment:

Reduce the influence of electromagnetic waves, please use it properly
Communication interface specification:
LTE FDD Vision protection warning Excessive use may damage vision

Vision precautions

Please rest for 10 minutes after 30 minutes use.
Children under 2 years old should not watch the screen and children over 2 years old should not watch the screen for more than 1 hour a day.

GPS Warning: To protect your privacy, please use it properly.

For WIFI 5G

Avoid affecting the operation of nearby radar systems.
High-gain directional antennas have to be applied to be applied to fixed point-to-point systems.

Manufacturing Date

Date of manufacturing is printed on the box

5.Frequently Asked Questions

Q: Why can I only see or use some of the functions?

There are two types of users in the MAGI app:

Administrator and Followers. Administrator have access to all functions, while Followers can only use limited features. The Administrator can transfer their role to another Follower through the MAGI app if needed.

Q: Where can I check missed calls or unseen notifications on the watch?

On the watch's home screen, swipe up to view all unread notifications and missed call alerts.

Q: Where can I quickly check the remaining battery, network status, or open the quick settings on the watch?

On the watch's home screen, swipe down to access the quick settings, where you can check the remaining battery, network status, and more

Q: Is the watch waterproof?

Yes. This watch is rated IP68 water-resistant. However,

to extend its service life, we recommend removing the watch before swimming, showering, or exposing it to high-pressure water or hot water.

Q: Why is my "Historical Location" track incomplete?

1. When the watch is indoors without Wi-Fi or in extremely remote areas, it may not be able to obtain location data. In these cases, the track may appear as a straight line.

2. Check your Location Settings in the MAGI app (App > Care Time). The watch does not report location data outside the active tracking period you set. (Manual positioning is still available.)

Tip: Choosing a more frequent tracking interval (e.g., every 5 minutes) provides more detailed location data but increases power consumption and reduces standby time.

Q: How to unbind the watch?

Open the MAGI app, go to Device Code, and tap Unbind.

How to Add a Contact Using the MAGI App

Method 1:

1. Open the MAGI app.
 2. Go to "Family" and tap "+".
 3. Select "Follower" or "Contact", then enter the required contact information as prompted to complete the setup.
- Note: A "Follower" has greater access to the watch's functions and can call the watch. A "Contact" has limited access – they can receive calls from the watch but cannot call the watch.
- Tip: Administrator > Follower > Contact (in terms of permissions).

Method 2:

1. Open the MAGI app and go to "Device Code".
2. Display the QR code.
3. On another phone with the MAGI app installed, tap "+" and scan the QR code to add the contact as "Follower".

6.Care and Maintenance Tips

- **Check Wearing Comfort**

Please regularly check that the smartwatch fits your child comfortably – not too tight or too loose.

- **Use in Good Signal Areas**

For more accurate location tracking, we recommend using the watch in areas with strong signal reception.

- **Daily Charging Tip**

To extend the battery life, it's best to charge the watch daily and keep the battery well-powered.

7.Warranty and Support

Warranty: This device is covered by a 1-year limited warranty against manufacturing defects.

Support: For any concerns, assistance or to make a warranty claim, please contact us at [support@magimagi.tech].

8.Declaration of Conformity

FCC Statement

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- * This device may not cause harmful interference.
- * This device must accept any interference received, including interference that may cause undesired operation.

ROHS Statement

Equipment name: Kids Watch Model: MX3						
Unit	Restricted substances and its chemical symbols					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr+6)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBA	○	○	○	○	○	○
Battery	○	○	○	○	○	○
Display	○	○	○	○	○	○
Case	○	○	○	○	○	○
Note 1: "Exceeding 0.1 wt%" and "exceeding 0.01 wt%" refer to cases where the percentage content of the restricted substance exceeds the threshold value.						
Note 2: "○" indicates that the percentage content of the restricted substance does not exceed the threshold value.						
Note 3: "—" indicates that the restricted substance is an exemption item.						

Applicant's name: Noahnology CO., LTD.

Address: 7F 2, No. 50, Section 4, Nanjing East Road, Songshan District, Taipei City

Call: 02-37653379

 This device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

 This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, it should be recycled responsibly to promote the sustainable reuse of material resources. To return your used device, please use the designated return and collection systems.